

Upgrade Flows


In this section:

- Overview
- Standalone Upgrade To 6.0.x
- HA Upgrade To 6.0.x


Overview

Upgrading from an SBC 3.1.x/4.x to SBC 6.0.x involves:

1. Upgrading Firmware (not applicable to SBC SWE)

 This step upgrades both BMC and BIOS firmwares for SBC 5000 and 7000 series.

2. Upgrading SBC Application


 This step upgrades only OS for both SBC 5000 and 7000 series.

The Standalone and HA upgrade flows below are shown for general guidance. Actual software and firmware versions may vary depending upon the upgrade path:

Standalone Upgrade To 6.0.x

 Please login to view the latest [Release Notes](#) prior to initiating your upgrade.

Figure 1: Standalone Upgrade Flow Diagram

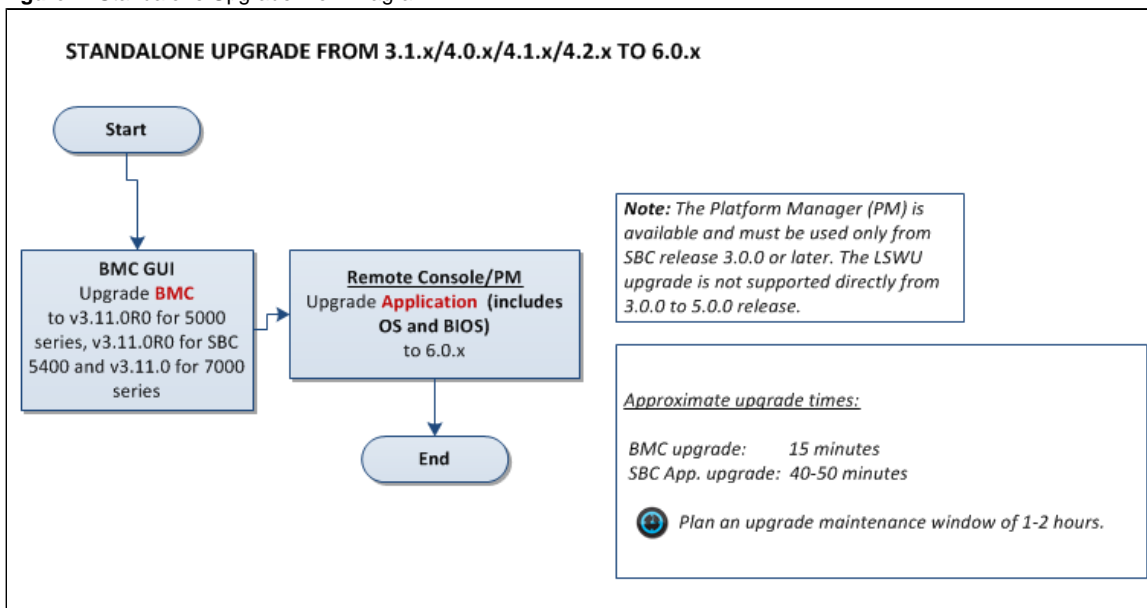

HA Upgrade To 6.0.x

 Please login to view the latest [Release Notes](#) prior to initiating your upgrade.

Figure 2: HA Upgrade Flow Diagram

