
GET postloginmessage

REST API Method: **GET /rest/postloginmessage**

This method will retrieve the Post-Login Message configured on the SBC Edge system.

URL:

<https://192.168.0.111/rest/postloginmessage>

HTTP Method

GET

Requires Authentication:

true