

---

# SBC Core Hardware Installation Guides

---


## Table of Contents

**Installing SBC 5000 Series Hardware**

**Installing SBC 5400 Hardware**

**Installing SBC 7000 Series Hardware**

This guide contains details for personnel installing and maintaining the SBC 5xx0/5400/7000 hardware platforms.

 The documentation wiki contains both publicly available and restricted content. Restricted materials are reserved for Ribbon Customers and Partners with Ribbon Support Portal access.

If you do not have an account, please register as a Ribbon Customer or Channel Partner.

