
CLI Reference Guide

Table of Contents

CLI Basics

- Command Line Structure
- CLI Modes
- Using CLI Help

CLI System-Level Mode

- Request Command Details - CLI
- Show Command Details - CLI
- User Configuration Import, Export, and Show - CLI
- Ping and Traceroute Commands - CLI

CLI Configure Mode

- Address Context - CLI
- Global - CLI
- Operations and Maintenance - CLI
- Profiles - CLI
- System - CLI

CLI Changes in This Release

This guide describes the Command Line Interface (CLI) used to configure and manage the SBC Core systems.

