


Managing SIP Server Tables

SIP Server Tables contain information about the SIP devices connected to the UX. The entries in the tables provide information about the IP Addresses, ports, and protocols used to communicate with each server. The Table Entries also contain links to counters that are useful for troubleshooting.


Working with SIP Server Tables

1. In the WebUI, click the **Settings** tab.
2. In the left navigation pane, go to **SIP > SIP Server Tables**.

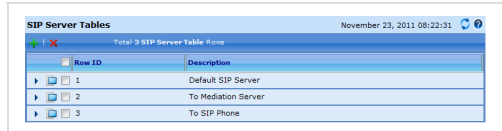


Row ID	Description
1	Default SIP Server
2	To Mediation Server
3	To SIP Phone


To view a SIP Server Table's properties:


1. Click the popup () icon next to the entry you want to view.
2. When you are finished, close the window.

To modify a SIP Server Table:

1. Click the **expand** () icon next to the entry you wish to modify.
2. Modify the table's **Description** as desired
3. Click **OK**.

To add a SIP Server Table:

1. Click the **Add** () icon.

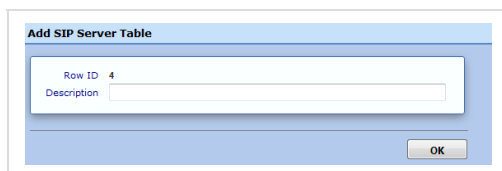



Add SIP Server Table

Row ID: 4

Description:

OK

2. Enter a descriptive name in the **Description** text field.
3. Click **OK**.

 **Helpful Tip:** To delete an entry, simply select the checkbox next to the entry you wish delete, then click the Delete () icon located at the top of the window.

Adding and Modifying Entries to SIP Server Tables