
GET sipvoicequalityserver

REST API Method: [GET /rest/sipvoicequalityserver/](#)

Retrieves the SIP Voice Quality Server configuration.

URL:

<https://192.168.0.111/rest/sipvoicequalityserver/>

HTTP Method

GET

Requires Authentication:

true

Parameters

Name	Required	Values	Description
filter	No	<ul style="list-style-type: none">• config• statistics	The type of filtered information in the response. If no filters are specified, all get applied.