
DELETE sipservertable id - sipserver id

REST API Method: DELETE

[/rest/sipservertable/{identifier}/sipserver/{identifier}](#)

Deletes a SIP Server Table Entry given a specific Table Entry ID in a given SIP Server Table.

URL:

<https://192.168.0.111/rest/sipservertable/{identifier}/sipserver/{identifier}>

HTTP Method

DELETE

Requires Authentication:

true

Parameters

none