

---

# DELETE siplocalauthtable id

---

**REST API Method: DELETE /rest/siplocalauthtable/{identifier}**

Deletes a SIP Local Passthrough Authorization Table given a specific Table ID.

**URL:**

<https://192.168.0.111/rest/siplocalauthtable/{identifier}>

**HTTP Method**

DELETE

**Requires Authentication:**

true

**Parameters**

*none*