


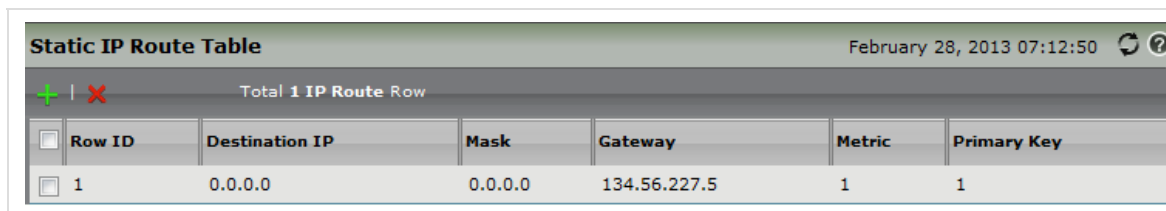
Managing Static IP Route Tables

Static IP Routes allow one to manually specify the next hop routers used to reach other networks. This is also where you specify the default routes for the connected IP networks (which use 0.0.0.0 as the Destination and Mask).

 When DHCP is configured on an interface, the default Static Route (0.0.0.0/0) will be removed and configured dynamically. To view the dynamically created default route, access the WebUI and navigate to **Protocols > IP > Routing Table**.

Working with Static IP Route Tables

1. In the WebUI, click the **Settings** tab.
2. In the left navigation pane, go to **Protocols > IP > Static Route Table**.



Row ID	Destination IP	Mask	Gateway	Metric	Primary Key
1	0.0.0.0	0.0.0.0	134.56.227.5	1	1


To view a Static IP Route Table's properties:

1. Click the popup(



) icon next to the entry you want to view.

2. When you are finished, close the window.

 **Helpful Tip:** To delete an entry, simply select the checkbox next to the entry you wish delete, then click the Delete (



) icon located at the top of the window.

Creating Entries in a Static IP Route Table