
Upgrading SBC 5000 Series Firmware

Upgrading the BMC firmware involves the following steps:

1. [Download the BMC firmware](#) from the Salesforce customer portal, and copy it to your local desktop or laptop, or any Linux server. To Know how to download files from Salesforce, refer to [Downloading the Software from Salesforce](#).
2. [Upgrading BMC Firmware](#) to the latest version.

