

How to Set up a Basic Call Flow


This section includes the following pages which describe configuring your system for a basic call flow using either the ERE or an external PSX for you to quickly assess that your system is up and operational, especially after an initial hardware/software installation.

Basic Call Flow Using ERE

Basic Call Flow Using External PSX

Before configuring your system for production, be sure to install your applicable SBC product licenses because some SBC functionality is not possible without a license.

 [See System Administration - License Management for license installation steps and Managing SBC Licenses for license descriptions.](#)

 No SBC license is required for basic routing.

