

---

# Configuring the SBC 7000 Platform

---

This section provides the following details pertaining to configuring BMC and remote console for the SBC 7000 platform.

**[Configuring SBC 7000 BMC IP Address Via Serial Console](#)**

**[Configuring SBC 7000 BMC for Remote Access](#)**

**[Configuring SBC 7000 Host Network Management Interface](#)**

**[Configuring NTP Server Settings Using SBC 7000 BMC](#)**

**[Uploading New SSL Certificates using SBC 7000 BMC](#)**

**[Changing the SBC 7000 BMC Password](#)**

**[Launching the Remote Console from the SBC 7000 BMC](#)**

