
DELETE siplocalauthtable id

REST API Method: **DELETE** /rest/siplocalauthtable/{identifier}

Deletes a SIP Local Passthrough Authorization Table given a specific Table ID.

URL:

<https://192.168.0.111/rest/siplocalauthtable/{identifier}>

HTTP Method

DELETE

Requires Authentication:

true

Parameters

none