
User Access Levels

The VX system administrator can assign user levels ranging from 0 to 14. Two level 15 users are allowed on the system.

User level 15 can access all available commands, and may perform all permissible configuration and monitoring tasks on the system. Level 15 provides the maximum command access. Menus show the required level in the Lv column in the display .

User Level 0 is the most restrictive level to commands. Availability of commands increases with higher level values.

Level 2 is required to VXwatch or to receive configuration data in VXbuilder.