

---

# Upgrading SBC Software

---

## Table of Contents

### Upgrade Flows

#### Verifying the Existing Software Version of SBC

#### Validating MD5Sum with 'Checksums Calculator'

#### Saving the SBC Configuration

#### Upgrading Firmware

#### Upgrading SBC Application

#### Reverting SBC Application

#### Restoring the SBC Configuration

#### Downgrading SBC Core Application

This section provides the sequence of instructions to upgrade the SBC application. This section also describes about saving and reloading the SBC core configuration.



#### **Warning**

The SBC Core system is a closed network device. Customer modifications at the Linux level are not allowed or supported. These modifications can cause stability, update and fail-over issues.

Customers should only configure the SBC using the supported interfaces (CLI, REST, EMA, EMS).

