

---

# GTT\_MSA

---

## Resource - MSA

### About this Resource

---

Defines an MSA managed object.

### REST API Methods for this Resource

---

- [GET MSA](#)
- [POST MSA](#)
- [PUT MSA](#)
- [DELETE MSA](#)

### Resource Schema

---

#### Configuration

Parameter Name	Required	Create	Read-Only	Data Type	Description
Name	Yes	No	No	string	Unique name of the Memory Space Accounting object.
CurrentSize	No	No	No	int32	Current size of the Memory Space Accounting object. TL1Name: CUR_SIZE
MaximumSize	No	No	No	int32	Maximum size of the Memory Space Accounting object. TL1Name: MAX_SIZE
CurrentUsage	No	No	No	MSACPercent0to100	Current usage of the Memory Space Accounting object. TL1Name: CUR_USAGE
Threshold1	No	No	No	MSACPercent0to99	Threshold 1 of the Memory Space Accounting object (0-99 %). TL1Name: T1
Threshold2	No	No	No	MSACPercent0to99	Threshold 2 of the Memory Space Accounting object (0-99 %). TL1Name: T2
Threshold3	No	No	No	MSACPercent0to99	Threshold 3 of the Memory Space Accounting object (0-99 %). TL1Name: T3
Reporting	No	No	No	MSACFeatureBoolean	Memory Space Accounting alarm reporting (ENABLED/DISABLED) TL1Name: REPORTING