
GET preloginmessage

REST API Method: **GET /rest/preloginmessage**

This method will retrieve the Pre-Login Message configured on the SBC Edge system.

URL:

<https://192.168.0.111/rest/preloginmessage>

HTTP Method

GET

Requires Authentication:

true

Parameters

Name	Required	Values	Description
filter	No	config	The type of filtered information in the response. If no filters are specified, all get applied.