

Managing SIP Server Tables

SIP Server Tables contain information about the SIP devices connected to the Sonus SBC 1000/2000. The entries in the tables provide information about the IP Addresses, ports, and protocols used to communicate with each server. The Table Entries also contain links to counters that are useful for troubleshooting.

Working with SIP Server Tables


1. In the WebUI, click the **Settings** tab.
2. In the left navigation pane, go to **SIP > SIP Server Tables**.




The screenshot shows the 'SIP Server Tables' interface. At the top, it says 'SIP Server Tables' and 'February 20, 2013 08:29:44'. Below that, there are '+ | X' icons and the text 'Total 3 SIP Server Table Rows'. The table has two columns: 'Description' and 'Primary Key'. The rows are:

Description	Primary Key
Default SIP Server	1
To Mediation Server	2
To SIP Phone	3


To view a SIP Server Table's properties:


1. Click the popup(
) icon next to the entry you want to view.
2. When you are finished, close the window.

To modify a SIP Server Table:

1. Click the **expand** (
) Icon next to the entry you wish to modify.
2. Modify the table's **Description** as desired
3. Click **OK**.

To add a SIP Server Table:

1. Click the **Create** (
) icon.

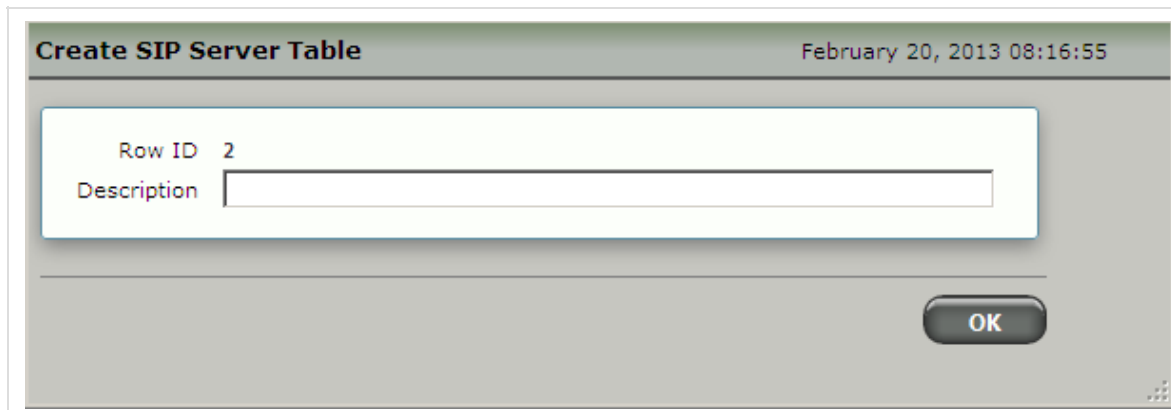

The screenshot shows the 'Create SIP Server Table' dialog box. It has a title bar with 'Create SIP Server Table' and 'February 20, 2013 08:16:55'. The main area contains a text input field for 'Row ID' with the value '2' and another text input field for 'Description'. At the bottom right, there is an 'OK' button.

2. Enter a descriptive name in the **Description** text field.
3. Click **OK**.



Helpful Tip: To delete an entry, simply select the checkbox next to the entry you wish delete, then click the Delete (



) icon located at the top of the window.

Creating and Modifying Entries in SIP Server Tables