

PUT staticipv6route id

REST API Method: **PUT /rest/staticipv6route/{identifier}**

Creates a Static IPv6 Route given a specific ID and values.

URL:

https://192.168.0.111/rest/staticipv6route/{identifier}

HTTP Method

PUT

Requires Authentication:

true

Parameters

Parameter Name	Required	Service Affecting	Data Type	Default Value	Possible Values	Description
ipDestinationAddr	Yes	Yes	string	none	45 - Max Length	<p>Is the IP or IPv6 address of the destination host or subnet. In dotted-decimal notation for IPv4, and colon-hex notation for IPv6.</p> <p> If this is an IPv4 route and the Destination IP Address field and Mask field are both set to 0.0.0.0, then the static route is called the IPv4 default static route.</p> <p> If this is an IPv6 route and the Destination IP Address field is set to :: and the prefix/mask is set to 0 then the static route is called the IPv6 default static route.</p>

ipDestinationMask	Yes	Yes	string	none	23 - Max Length	<p>IPv4: Is the network mask of the destination host or subnet, in dotted notation.</p> <div style="border: 1px solid black; padding: 5px;"> <p> If Destination IP Address field and Mask field are both set to 0.0.0.0, then the static route is called default static route.</p> </div> <p>IPv6: Is the network prefix length for the destination host or subnet (i.e. 0-128).</p> <div style="border: 1px solid black; padding: 5px;"> <p> If Destination IP Address field is set to :: and the prefix is 0, then the static route is called default static route.</p> </div>
ipGatewayType	No	No	Enum	0	Possible values: <ul style="list-style-type: none"> 0 - ROUTE_ENTRY_INDIRECT 1 - ROUTE_ENTRY_DIRECT 	Specifies the route type (Global/Indirect or Link Local/Direct) for this IPv6 Static Route. Note: This option only applies to IPv6 static routes.
ipNextHopAddress	Yes	Yes	string	none	45 - Max Length	Is the IP or IPv6 address of the next-hop router. In dotted-decimal notation for IPv4, and colon-hex notation for IPv6.
ifName	Yes	Yes	string	none	20 - Max Length	Applicable to IPv6 Link Local routes only. This specifies the interface to use.
ipLinkMonitorEnabled	No	No	Enum	0	Possible values: <ul style="list-style-type: none"> 0 - btFalse 1 - btTrue 	Specifies if this next-hop router is monitored by the link monitor. This field is automatically enabled when the link monitor selects this next-hop router as the gateway for monitoring.

ipStaticRouteMetric	Yes	Yes	int	1	<p>Possible values:</p> <ul style="list-style-type: none"> • 1 - Minimum • 255 - Maximum 	Is the routing cost of this route and hence indirectly specifies the preference of the route. Lower values indicate more preferred routes. Typical value is 1 for most static routes indicating that static routes are preferred to dynamic routes.
ipAddressingMode	No	No	Enum	0	<p>Possible values:</p> <ul style="list-style-type: none"> • 0 - IPV4_ADDR_MODE • 1 - IPV6_ADDR_MODE • 2 - IPV4_AND_IPV6 	Specifies the address mode for this Static Route. Note only IPv4 and IPv6 are valid.