

---

# SBC SWe Lite Installation and Upgrade Guide

---

## Table of Contents

- SBC SWe Lite Hardware and Software Requirements
  - Hardware and Software Requirements - KVM Hypervisor
  - Hardware and Software Requirements - Microsoft Hyper-V
  - Hardware and Software Requirements - VMware ESXi
- Downloading the SBC SWe Lite Package
- Installing SBC SWe Lite
  - Installing SBC SWe Lite on KVM Hypervisor
  - Installing SBC SWe Lite on Microsoft Hyper-V
  - Installing SBC SWe Lite on VMware ESXi
- SBC SWe Lite Initial Setup
  - Mapping Network Interfaces
- Obtaining and Installing a SWe Lite Trial License
- Obtaining and Installing a SWe Lite License
- Upgrading SBC SWe Lite
  - Downgrading (Rolling Back) an SBC SWe Lite Upgrade
  - Upgrading the Inactive Partition – SBC SWe Lite

This section provides information on installing and upgrading SBC SWe Lite software in a virtual environment. This virtual application includes the same basic features and functionality as the SBC Edge.

### **Some Features and Processes Not Supported by SWe Lite In This Release**

Throughout this document set, features and processes in the SBC Edge that are not currently applicable to SBC SWe Lite are identified with this note:



Not supported by SWe Lite in this release.

When you see this note, be aware that it applies to all content on the page (unless noted otherwise), and all child pages for that page.

**For a comprehensive explanation of features and processes not covered in SWe Lite, refer to [Functional Differences Between SBC Edge and SBC SWe Lite](#).**

