

Downgrading SBC Core Application

To downgrade the SBC application software prior to an initial deployment and/or configuration, follow the steps below.

 **Note**

Navigate to the [Documentation Portal](#) and locate the SBC software installation documentation associated with the software version being downgraded to for installation steps.

1. ISO install the required ConnexIP OS version (SBC 5000/7000 series only).
 - a. [Re-Installing ConnexIP Operating System for SBC 5000 Series](#)
 - b. [Re-Installing ConnexIP Operating System for SBC 7000 Series](#).
2. Install the required SBC application.
3. For HA configuration, repeat the above steps for the second server.

