

Ethernet Adapters

Use tools and procedures in this section to establish the VX node Ethernet adapter set, and to access configuration tools for IP interfaces.

View Ethernet Adapters	Select the Networking a Ethernet Adapters subdirectory for the VX node and view contents at the Ethernet Adapters screen.
Add Ethernet Adapters	Insert a new line in the Ethernet Adapters screen, then double-click the line to present the Edit Adapters dialog box.
Modify Ethernet Adapters	Double-click on an entry in the Ethernet Adapters screen to present the Edit IP Interfaces dialog box.

Edit Ethernet Adapters Dialog

Edit Adapter # 1 ✕

Adapter # OK

Enabled Cancel

Desc

Link Speed

SNMP Name

SNMP Alias

Field	Description
Adapter #	Number of the adapter. This entry is displayed in the Adapter column of the table.
Enabled	Drop-down selection range from which to set adapter as either enabled or disabled. This entry is displayed in the Enabled column of the table.
Desc	Arbitrary field in which to type a description for the adapter. <div style="border: 1px solid gray; padding: 5px; margin-top: 10px;"> <p> If this field is set to a non-empty value, the SNMP subsystem uses this value to replace the default description of the 'ifDesc' MIB of the 'ifTable' and 'ifXTable'.</p> </div>
Link Speed	Operation speed of the Ethernet adapter
SNMP Name	Name of this adapter used by Simple Network Management Protocol <div style="border: 1px solid gray; padding: 5px; margin-top: 10px;"> <p> This name will appear in response to SNMP request for 'ifName' MIB of the 'ifTable' and 'ifXTable'.</p> </div>

**SNMP
Alias**

Management shortcut for this adapter used by Simple Network Management Protocol



This name will appear in response to SNMP request for 'ifAlias' MIB of the 'ifTable' and 'ifXTable'.

For more information about configuring VX for SNMP, see [Configuring SNMP](#).