

---

# Configuring the SBC 7000 Platform

---

This section provides the following details pertaining to configuring BMC and remote console for the SBC 7000 platform.

**Configuring SBC 7000 BMC IP Address Via Serial Console**

**Configuring SBC 7000 BMC for Remote Access**

**Configuring SBC 7000 Host Network Management Interface**

**Configuring NTP Server Settings Using SBC 7000 BMC**

**Uploading New SSL Certificates using SBC 7000 BMC**

**Changing the SBC 7000 BMC Password**

**Launching the Remote Console from the SBC 7000 BMC**

