

# Command Line Interface U Commands

- unlock
- unblock
- unjoin domain
- unload
- unregister

## unlock

<b>Purpose</b>	Unlocks users.
<b>Command Mode</b>	global
<b>Required Access</b>	level 15
<b>Syntax</b>	<b>unlock</b> user <name>

Parameters and Operations	Description
<b>name</b>	Indicates the user that will be unlocked  VX# <b>unlock user bob</b>

## unblock

<b>Purpose</b>	Unblock specified channel(s) and link(s).
<b>Command Mode</b>	global
<b>Required Access</b>	level 1
<b>Syntax</b>	<b>unblock</b> <channel  link>

Parameters and Operations	Description
<b>channel</b>	Unblock channel. Use the following syntax to express equipment notation, when specifying the channel to be unblocked: <shelf#>:<card#>:<port#>:<channel#>  <pre>VX# unblockshelf1:card1:port1:channel2</pre>
<b>link</b>	Unblock a specified SS7 link, or unblock all SS7 links.  <pre>VX# unblock link 1 or VX# unblocklink all Sent Unblock message to all links</pre>

## unjoin domain

<b>Purpose</b>	Releases a node from a domain.
<b>Command Mode</b>	global
<b>Required Access</b>	level 15
<b>Syntax</b>	<b>unjoindomain</b>

## unload

<b>Purpose</b>	Unload a script
<b>Command Mode</b>	global
<b>Required Access</b>	level 15
<b>Syntax</b>	<b>unload script</b> <scriptname   all>

Parameters and Operations	Description
<b>scriptname</b>	Name of specified BSL script to unload.  <pre>VX# unblock script thescriptname</pre>
<b>all</b>	Unload all scripts.  <pre>VX# unblock script all</pre>

## unregister

<b>Purpose</b>	Unregister a trunk-group with an H.323 gatekeeper
<b>Command Mode</b>	global
<b>Required Access</b>	level 15
<b>Syntax</b>	<b>unregister gatekeeper</b> <value>

Parameters and Operations	Description
<b>value</b>	trunk-group number to unregister as the H.323 gatekeeper

0-32767

VX# unregister gatekeeper 1