

---

# How to Set up a Basic Call Flow

---


This section includes the following pages which describe configuring your system for a basic call flow using either the ERE or an external PSX for you to quickly assess that your system is up and operational, especially after an initial hardware/software installation.

## Basic Call Flow Using ERE

## Basic Call Flow Using External PSX

Before configuring your system for production, be sure to install your applicable SBC product licenses because some SBC functionality is not possible without a license.

 [See System Administration - License Management for license installation steps and SBC Node-Locked Licenses for HW and SWe SBCs for license descriptions.](#)

 No SBC license is required for basic routing.

