
Resource - systemcallstats

About this Resource

Defines System Call Statistics Managed Object

REST API Methods for this Resource

- GET systemcallstats
- POST systemcallstats - action resetcallstats

Resource Schema

Statistics

Parameter Name	Description	Data Type	Possible Values
rt_NumCallAttempts	Total number of call attempts system wide since system came up.	int	
rt_NumCallSucceeded	Total number of successfull calls system wide since system came up.	int	
rt_NumCallFailed	Total number of failed calls system wide since system came up.	int	
rt_NumCallCurrentlyUp	Number of currently connected calls system wide.	int	
rt_NumCallCurrentlyTransient	Number of transient calls (setup, progress, alerting state) system wide.	int	
rt_NumInternalGlaires	Number of internal glaires system wide since system came up.	int	
rt_NumExternalGlaires	Number of external glaires system wide since system came up.	int	
rt_NumCallAbandonedNoTrunk	Number of rejected calls due to no channel available system wide since system came up.	int	
rt_NumCallUnAnswered	Number of unanswered calls system wide since system came up.	int	