

Connecting EdgeMarc for First Time

The LAN interface ports are pre-configured with the IP address 192.168.1.1.

1. Connect a computer to the LAN interface port (LAN Port 1) using an Ethernet cable or connect to an Ethernet switch (using the IP address 192.168.1.2 and subnet mask 255.255.255.0).
2. Launch a web browser on your computer and enter the following URL: <http://192.168.1.1>.
3. Press **Return**. The EdgeMarc login screen is displayed.


EdgeMarc Login Screen



The image shows a web browser window titled "Connect to 192.168.1.1". The page has a blue header with a key icon. Below the header, the word "System" is displayed. There are three input fields: "User name:" with a dropdown menu showing "root", "Password:" with a masked field of seven dots, and a checkbox labeled "Remember my password" which is unchecked. At the bottom, there are "OK" and "Cancel" buttons.

4. Enter your initial username in the field provided: **root**
5. Enter your initial password in the field provided: **default**
6. Click **OK**.
7. After you have logged in to the system for the first time with the default credentials, you are directed to the Change Password page (see following figure).

Change Password Page

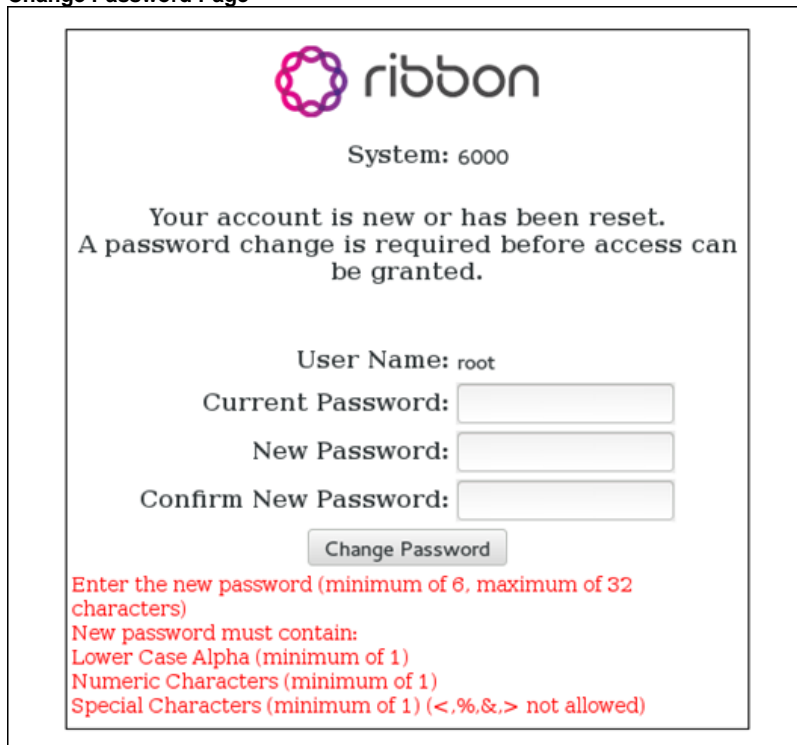

The image shows a web page with the "ribbon" logo at the top. Below the logo, it says "System: 6000". The main text reads: "Your account is new or has been reset. A password change is required before access can be granted." Below this, there are three input fields: "User Name: root", "Current Password:", "New Password:", and "Confirm New Password:". A "Change Password" button is located below the input fields. At the bottom, there are instructions in red text: "Enter the new password (minimum of 6, maximum of 32 characters). New password must contain: Lower Case Alpha (minimum of 1), Numeric Characters (minimum of 1), Special Characters (minimum of 1) (<, %, &, > not allowed)".

8. Enter your Current and New Passwords in the Change Password Page according to the new password instructions given in the page and then click **Change Password**. The Password Change Confirmation Page will be displayed.

9. Select **Click here to log on with your new password** from the Password Change Confirmation Page.
10. You will be navigated again to the EdgeMarc login screen ([EdgeMarc Login Screen](#)). Log in to the EdgeMarc Admin landing page ([EdgeMarc Admin Landing Page](#)) with your User Name and New Password from the EdgeMarc login screen.

EdgeMarc Login Screen

Connect to 192.168.1.1

System

User name:

Password:

Remember my password

OK Cancel

EdgeMarc Admin Landing Page

Help

Configuration Menu

- + Admin
- + Network
- + Users
- + Security
- + SD-WAN
- + VoIP
- + VPN
- + Switch

Software Version:
Version 15.7.0AlphaSep-03-2019 -- Tue Sep 3 01:09:38 PDT 2019

Hostname:
6000

Model:
EdgeMarc 6000 with IPv6 support

Vendor:
Edgewater

LAN Interface MAC Address:
54:39:68:1B:C8:D2

Registration Status:
The ALG feature is registered. View [license key](#).

System:
Date : 09/03/2019 23:11:01 UTC
Erase Button : Enabled

Change Administrative Password:
The password of the read-write administrative user can be [changed](#).

Change Read-Only Password:
The password of the read-only user can be [changed](#).